

FEC403EN

Extinguishing Control Panel

EN54
CERTIFIED



GE imagination at work

FEC403EN Extinguishing panel

Table of contents

- **Panel Features**
- Panel Hardware
- System Description

FEC403EN Extinguishing panel

Table of contents

The FEC403EN conventional extinguishing control panel is EN54 approved for single area applications. Very powerful and cost-effective, it is extremely easy to install and use due to its advanced design. The panel has 1 double-knock (coincidence) extinguishing area consisting of two fire zones with 1 free fire detection zone to protect the panel.



FEC403EN Extinguishing panel

Standard Features


- EN54-2, EN54-4 and EN12094-1 approved; Class A: -5°C to +40°C
- 3 Zones
 - 1 Extinguishing area with 2 detection zones
 - 1 Standard fire zone
- MCP Start, hold and abort options
- Optical panel control for warning, evacuation and release indications
- Extinguishing agent release control (Solenoid/pyrotechnic selectable)
- All inputs and outputs supervised
- Common outputs with potential free relays
- Optional additional relay and supervised outputs
- One-man test capability



Extinguishing Options

Options supported

- Manual or automatic mode
- Delay to gas release
- Release state indication from gas flow switch or actuator
- Hold mode: French (restart delay) or UK (keep delay)
- Door monitoring
- Output to fire routing
- Output to fault routing
- Clean-me compliant

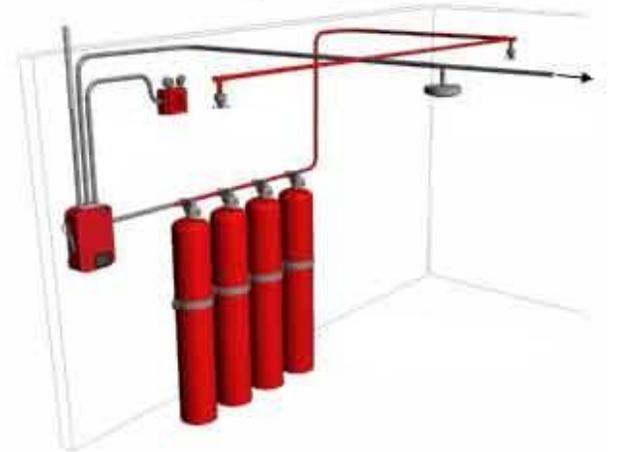

Extinguishing Options

Options not supported

- Spare bank cylinders (multiple bank discharge)
- Low pressure CO₂
- Mechanically selection of flooding zone



FEC403EN Extinguishing panel


Table of contents

- Panel Features
- **Panel Hardware**
- System Description

FEC403EN Extinguishing Control Panel

Main component location

1. Power supply
2. Earth stud
3. Zone, fire detection and extinguishing system input/output connectors
4. Configuration DIP switches
5. Control panel keypad
6. Master relay module connector
7. Keypad to PCB connector
8. Batteries
9. 230 VAC supply connector and fuse

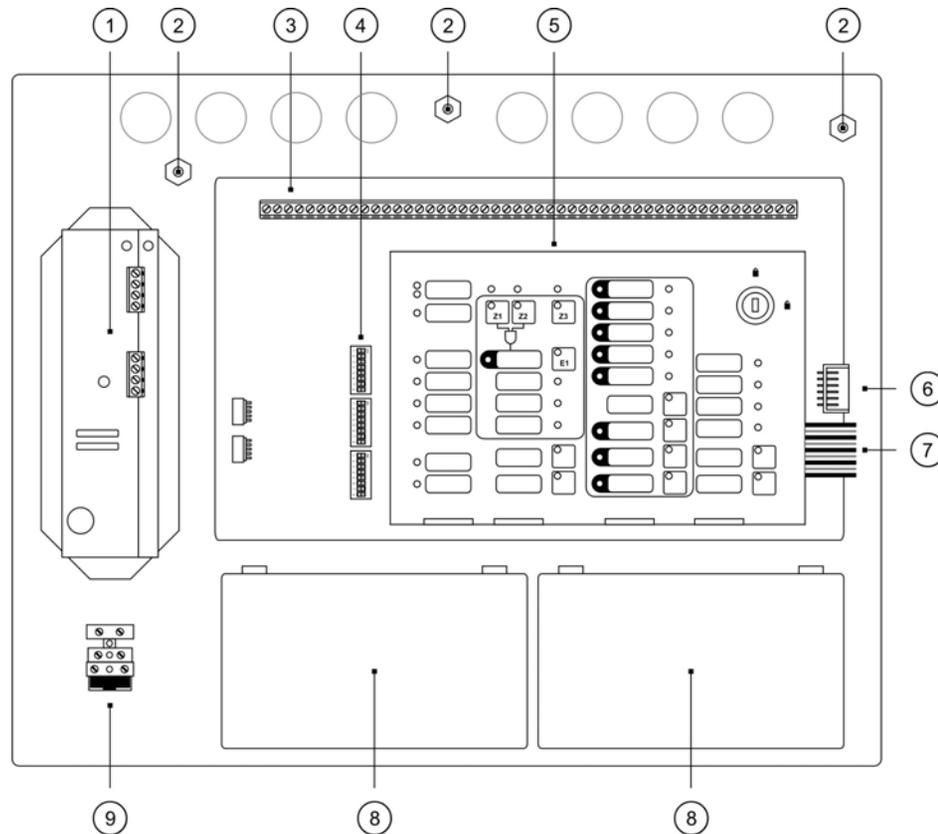

FEC403EN Extinguishing Control Panel

Supervised inputs and outputs overview (1)

- Pyrotechnic and Solenoid outputs (500 mA)
- Fire brigade output (250 mA)
- 3 x Illuminated warning sign outputs (450 mA each)
 - Gas released
 - Evacuate
 - Warning
- 2 x Sounder outputs (250 mA each)
- 2 x Relay outputs (1 A)
 - Common fault (with return)
 - Common alarm
- 24 VDC Aux resetable output (100 mA)
- 24 VDC Standard output (1.3A)



FEC403EN Extinguishing Control Panel


Supervised inputs and outputs overview (2)

- 2 x Communication outputs
 - Serial Communications (for RB/SB404)
 - RS485 Communications (for future use)
- Door monitor input
- Gas flow switch input
- Pressure switch input
- Auto/Manual mode input
- 3 x Extinguishing control MCPs
 - Abort extinguishing
 - Hold extinguishing
 - Start extinguishing
- 3 x Fire zone inputs (20 detectors or 32 MCPs)



FEC403EN Extinguishing Control Panel


All controls and indications on a standard user interface

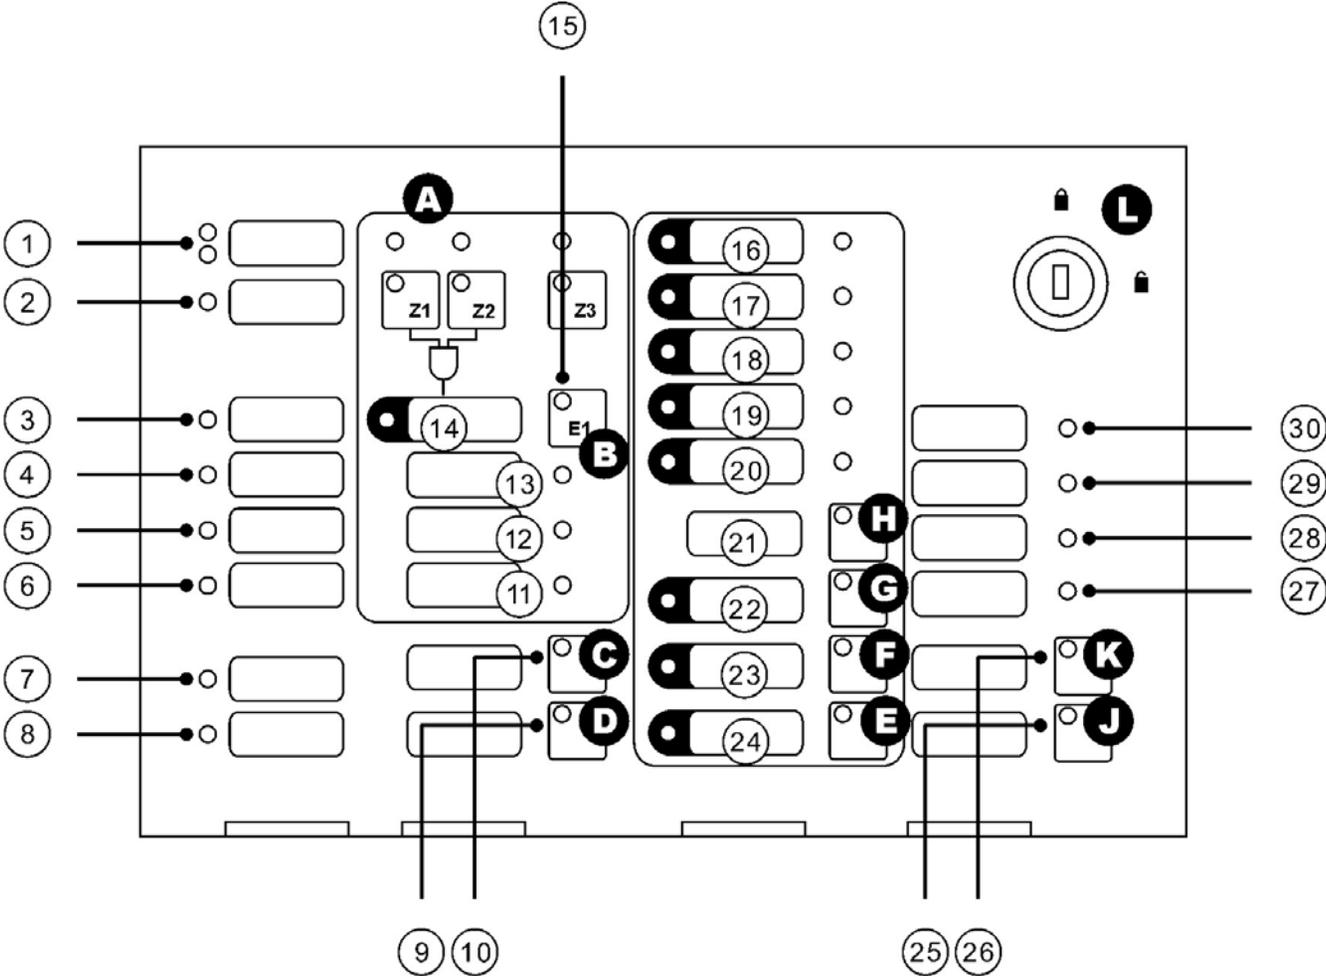

FEC403EN Extinguishing Control Panel

Common Indications (Block 1)


1. Fire LEDs (general / zone)
2. Fault LEDs (general / zone)
3. Maintenance LED
4. Fault return LED
5. Supply fault LED
6. System fault LED
7. Out of service LED
8. Supply on LED

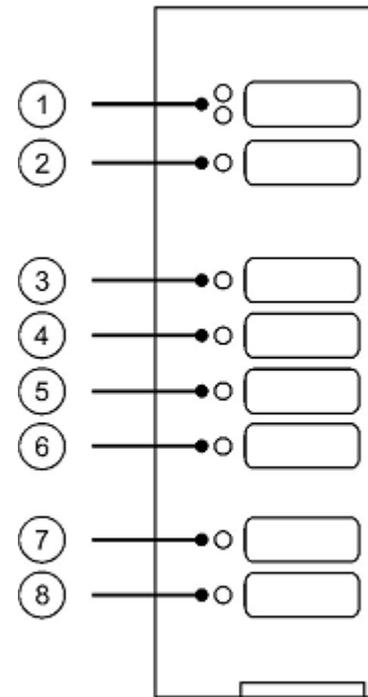

FEC403EN Extinguishing Control Panel

Indications (Block 2)


- 10. Test LED
- 11. Manual mode LED
- 12. Start MCP fault LED
- 13. Released LED
- 14. Extinguishing activated LED
- 15. Extinguishing fault / disable LED

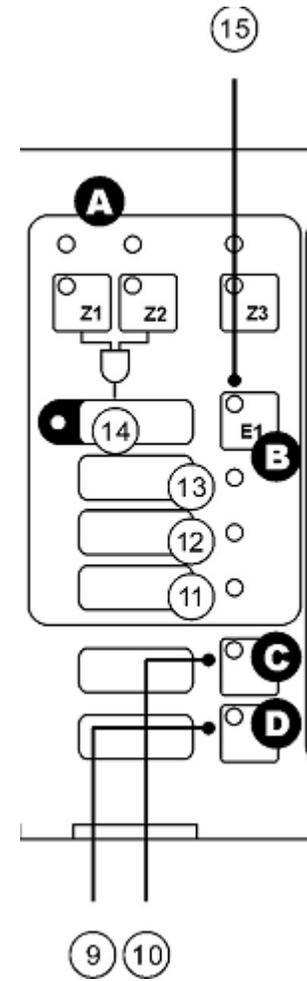

FEC403EN Extinguishing Control Panel

Indications (Block 3)


- 16. Hold MCP LEDs (Active / Fault)
- 17. Abort MCP LEDs (Active / Fault)
- 18. Gas pressure LEDs (Active / Fault)
- 19. Gas flow LEDs (Active / Fault)
- 20. Door monitor LEDs (Active / Fault)
- 21. Fire Brigade delay LED
- 22. Fire Brigade start LEDs (Active / Fault)
- 23. Sounder 1 stop LEDs (Active / Fault)
- 24. Sounder 2 stop LEDs (Active / Fault)

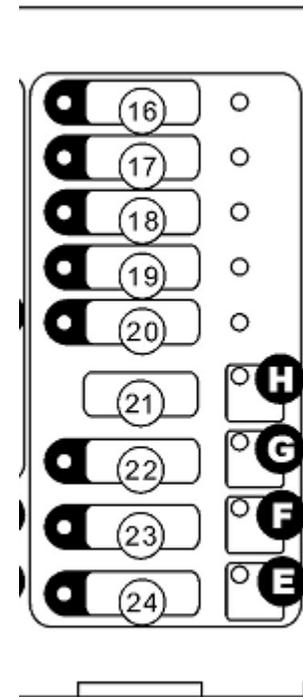

FEC403EN Extinguishing Control Panel

Indications (Block 4)


- 25. Silence buzzer LED
- 26. Reset LED
- 27. Auxiliary disabled LED
- 28. Warning sign fault LED
- 29. Evacuate sign fault LED
- 30. Released sign fault LED

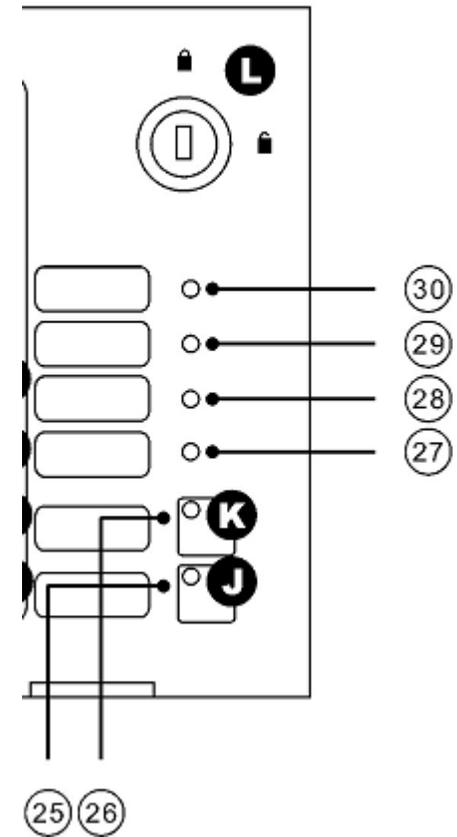

FEC403EN Extinguishing Control Panel

Front panel controls

- A. Zone buttons (Z1, Z2, Z3)
- B. Disable extinguishing button
- C. Test button
- D. Disable button (general)
- E. Sounder 2 stop button
- F. Sounder 1 stop button
- G. Fire brigade start button
- H. Fire brigade delay button
- J. Silence Buzzer button
- K. Reset button
- L. Access key (level 1 / level 2)

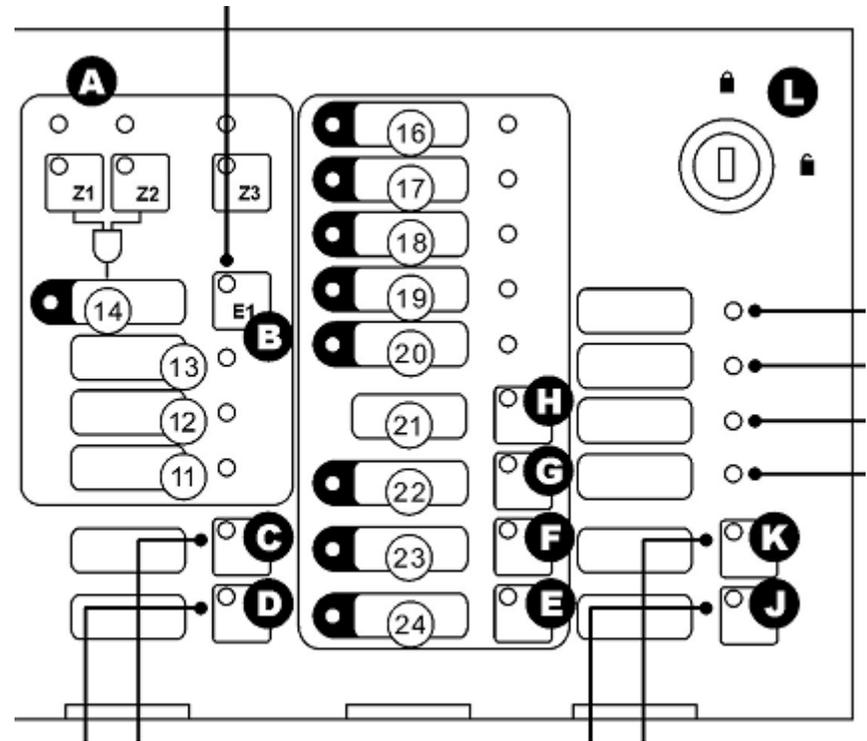

FEC403EN Extinguishing panel

Table of contents

- Panel Features
- Panel Hardware
- **System Description**

FEC403EN Extinguishing panel


System Compatibility



Kilsen




Ziton

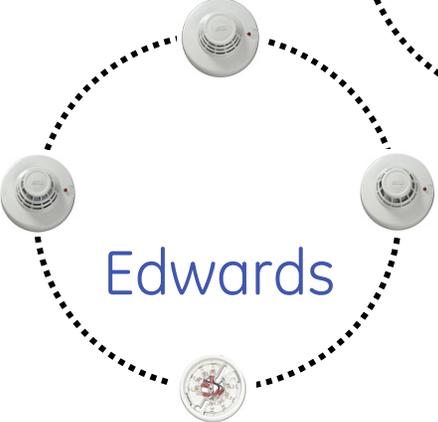

Edwards



Aritech

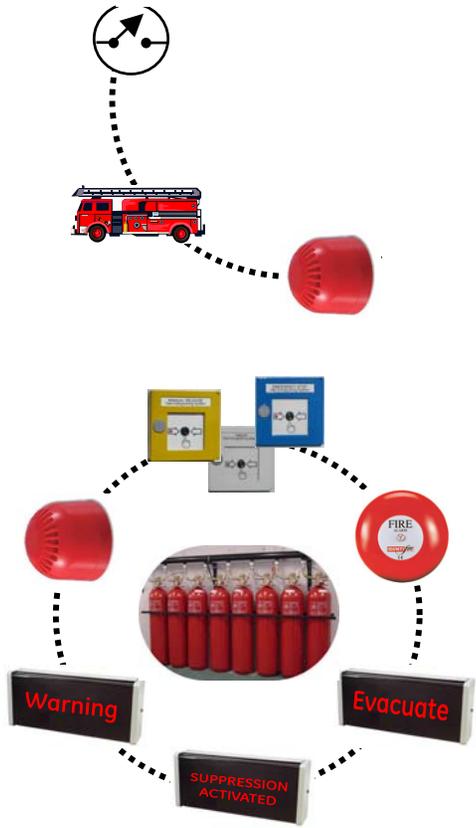

Full GE Security system compatibility with all conventional devices

FEC403EN Extinguishing panel

System Features

- Supports the full line of EN54 approved sensors in the GE Security, Aritech, Edwards, Kilsen and Ziton brands
- Supports maintenance (CleanMe™) indications from the Aritech 700 Series devices
- Supports output expansions, both supervised and unsupervised
- Support active-end-of-line zones with head-out supervision

